




ZI-9615

Digital Thermometer

User Manual

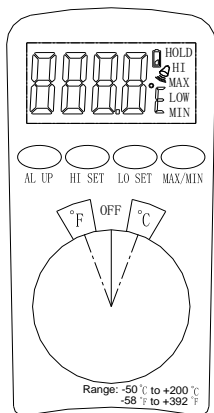

Specification:

1. Temperature Range: $-50\text{ }^{\circ}\text{C}$ to $+200\text{ }^{\circ}\text{C}$
($-58\text{ }^{\circ}\text{F}$ to $+392\text{ }^{\circ}\text{F}$)
2. Accuracy: $\pm 2\text{ }^{\circ}\text{C}$ ($\pm 4\text{ }^{\circ}\text{F}$)
3. Resolution: 0.1 °
4. Measurement Rate: 1 time per second
5. Auto Power Off: 10 minutes
6. HI/Low Temperature Alarm
7. Low Battery Indication
8. Alarm Temperature Range : $-40\text{ }^{\circ}\text{C}$ to $+200\text{ }^{\circ}\text{C}$ ($-40\text{ }^{\circ}\text{F}$ to $+392\text{ }^{\circ}\text{F}$)
9. Shut down the alarm by pressing any button.

Button Indication:

[AL UP] : HI/Low Temperature Alarm Switch

[HI SET] : High Temperature Alarm Setting

[LO SET] : Low Temperature Alarm Setting

[MAX/MIN] : Max/Min Reading

Operation:

1. Under normal temperature status, press [HI SET] button to enter into High Temperature Setting Interface with “HT” symbol. Press [AL UP] button to turn on/off the alarm function. Hold [HI SET] button for 2s to start high temperature setting with a flickering indication. Press [AL UP] button to turn up the value by integral quantities, while long press for fast adjustment. Press [HI SET] button to finish and confirm the setting.
2. To set the Low Alarm, simply press the [LOW SET] button, and then follow the same procedure as that of the HI Alarm.
3. Alarm Temperature Range: $-40\text{ }^{\circ}\text{C}$ to $+200\text{ }^{\circ}\text{C}$.